



INSTRUKCJA MONTAŻU

FURTKA OGRODZENIOWA
SZAFIR M Z ELEKTROZACZEPEM

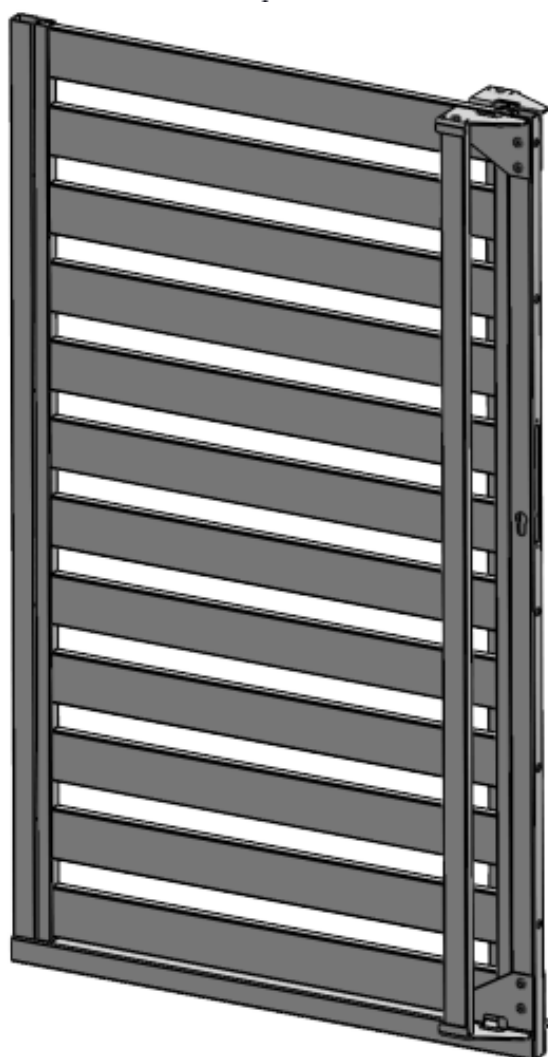

ZAWARTOŚĆ OPAKOWAŃ

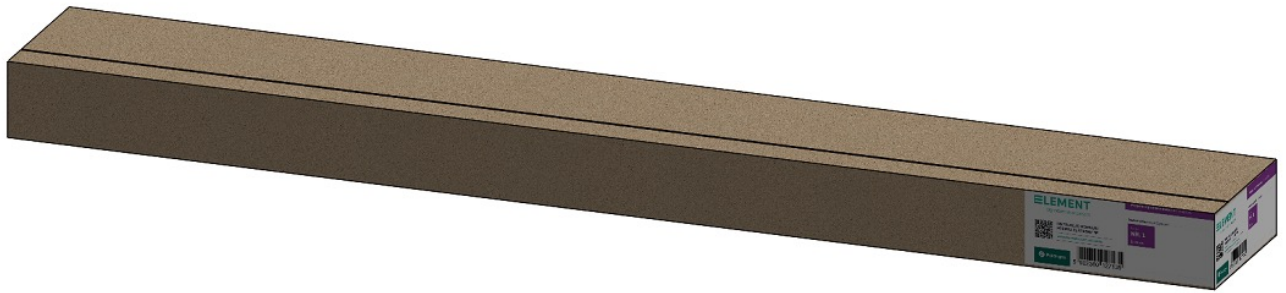

6x  80x20



6x  80x20



2x  25x25




1x  40x30



1x  40x30



1x  40x40




16x M6x12 [A]




12x (M6x25) [B]



12x [C]

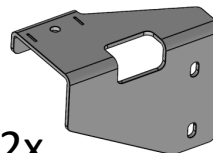

2x

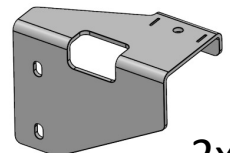

2x

2x [D]
40x30



11x [E]



12x [F]







1x [G]




2x




POTRZEBNE NARZĘDZIA

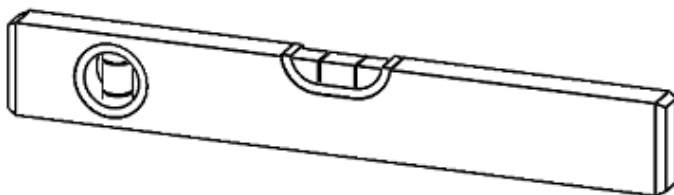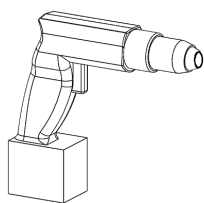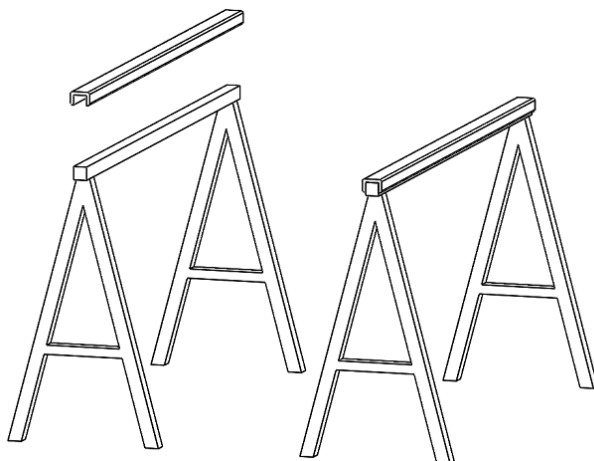



BIT PH 2

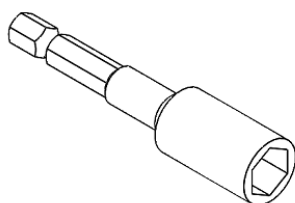


HEX M8





HEX 4

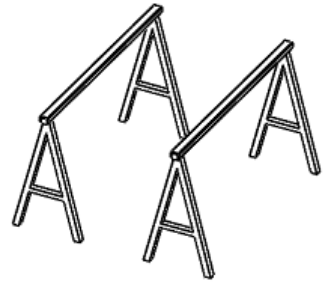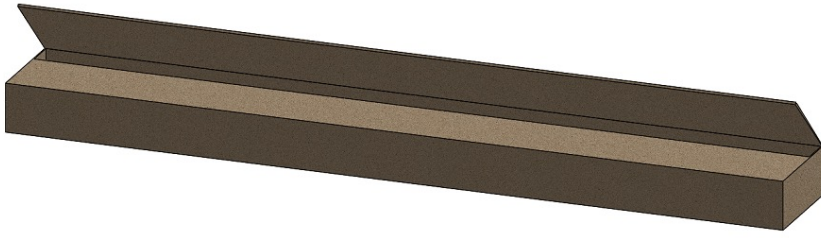


[1]

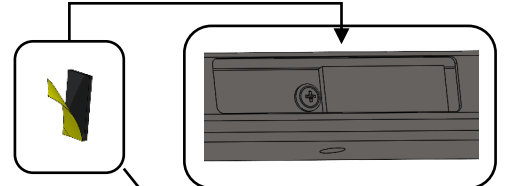



[2]

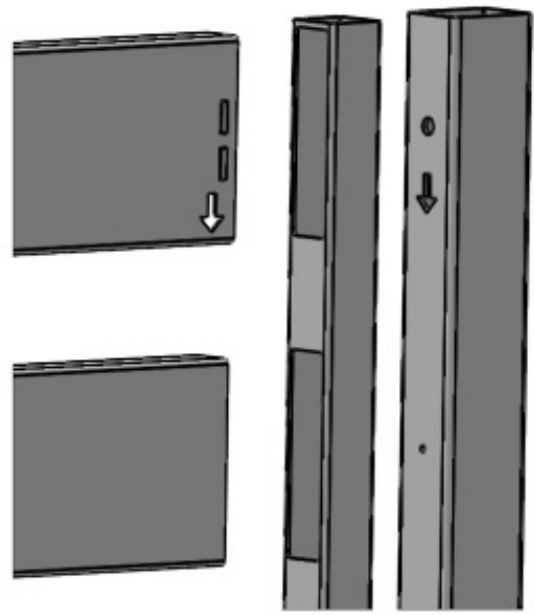


[B]

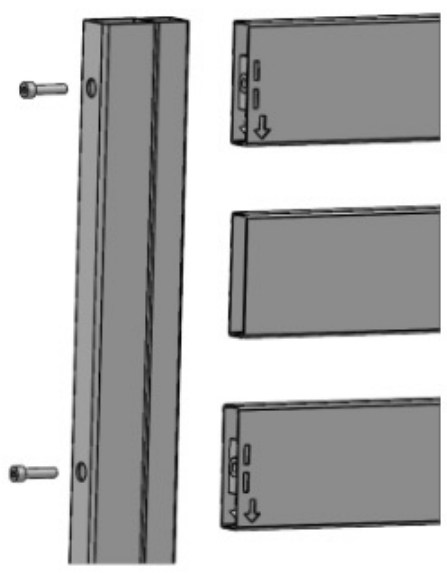

[3]


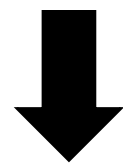
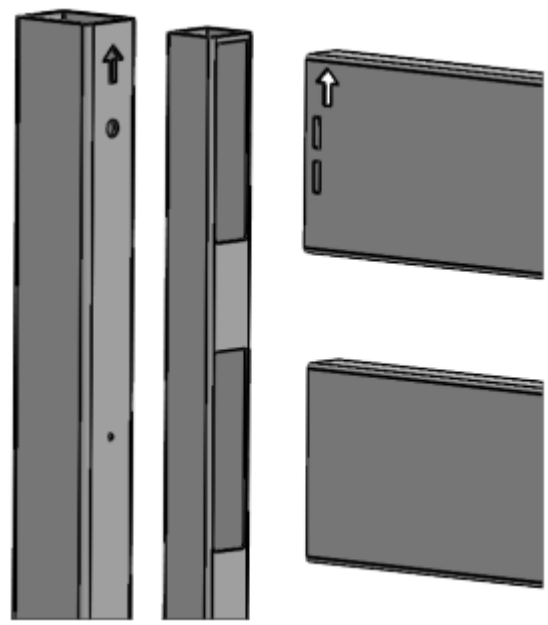


[B]

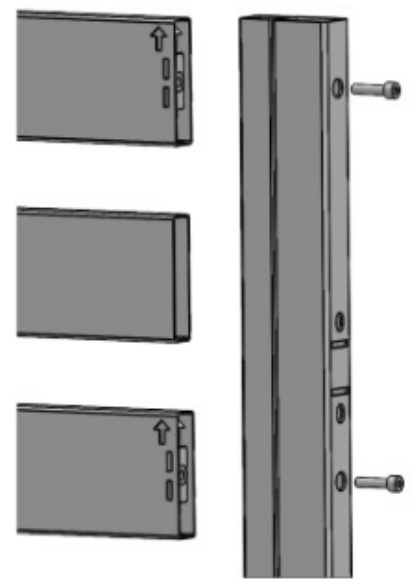


[4]

[A]

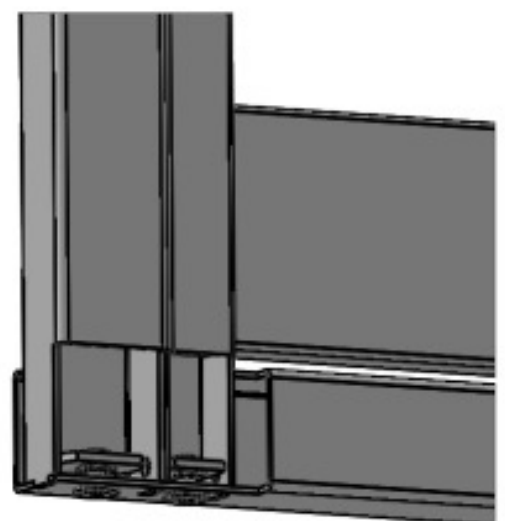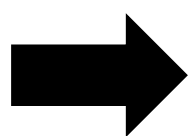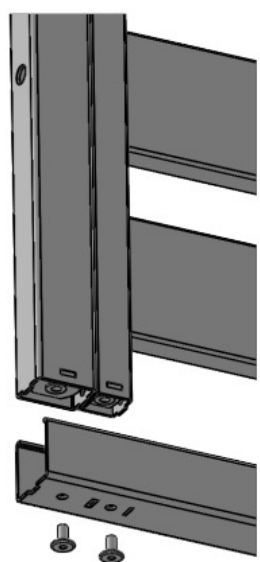


[5]

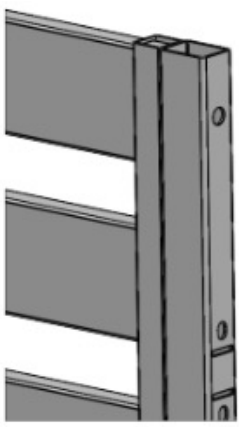


[E]

[6]

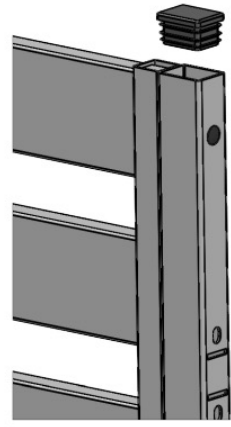

[D]

[6]

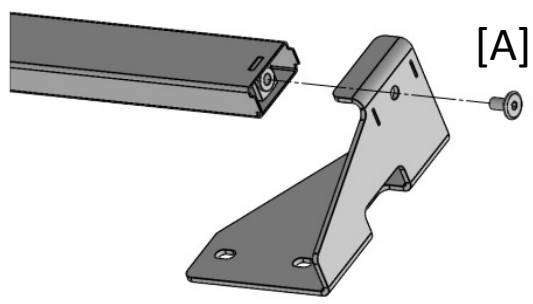

[A]

[7]



[8]



