



INSTRUKCJA MONTAŻU

FURTKA OGRODZENIOWA
SZAFIR M

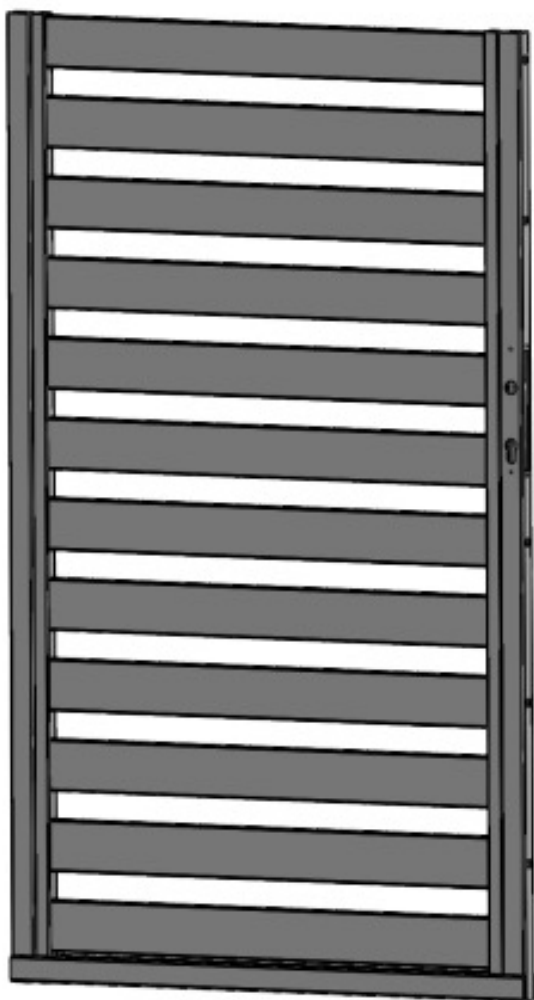

ZAWARTOŚĆ OPAKOWAŃ

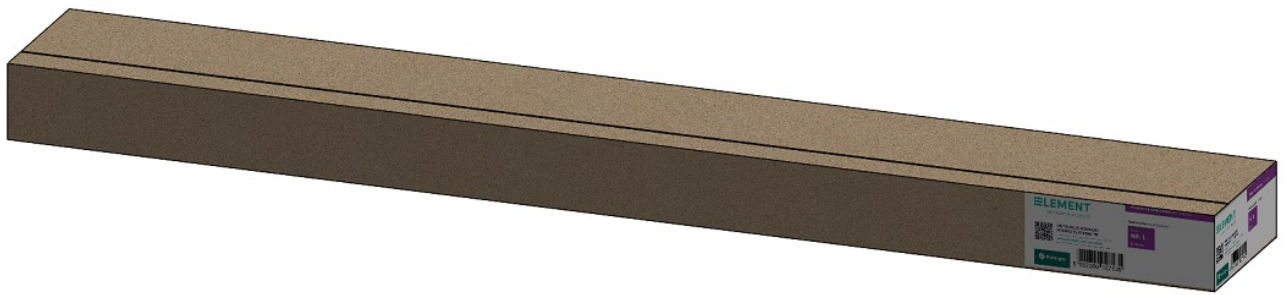

6x  80x20



6x  80x20



2x  25x25




1x  40x30



1x  40x30



1x  40x40

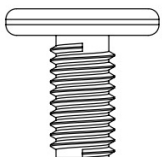

4x M6x12 [A]



12x (M6x25) [B]



12x [C]

2x [D]
40x30




15x [E]







12x [F]




1x [G]

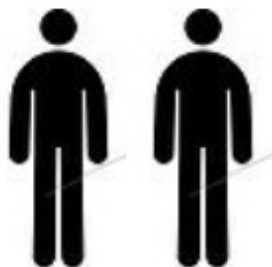


POTRZEBNE NARZĘDZIA

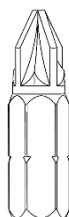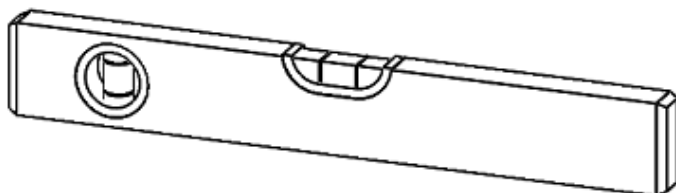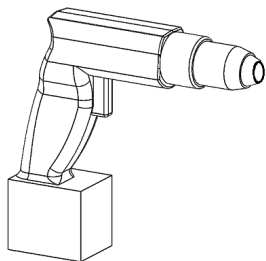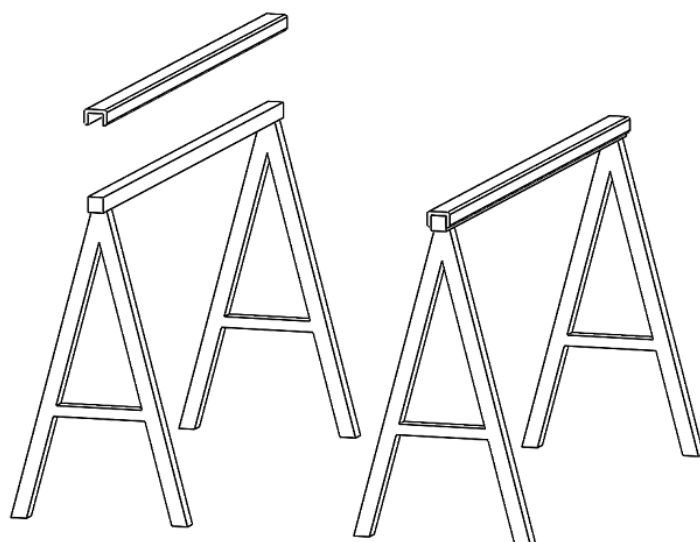



BIT PH 2

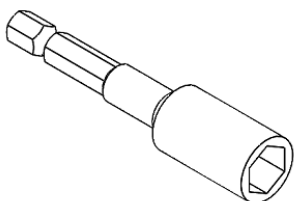


HEX M8

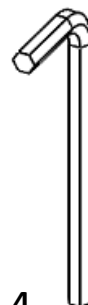



HEX 4

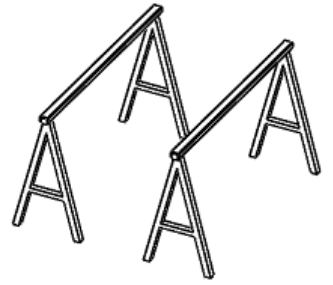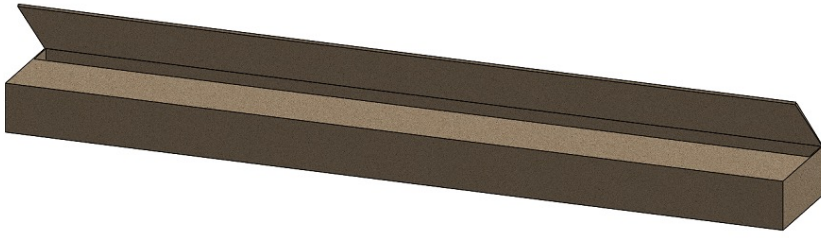


[1]

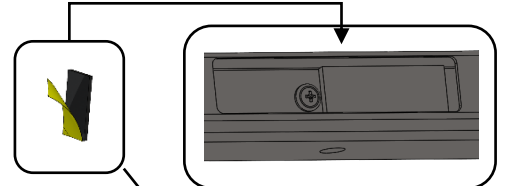



[2]

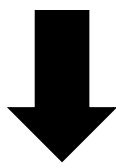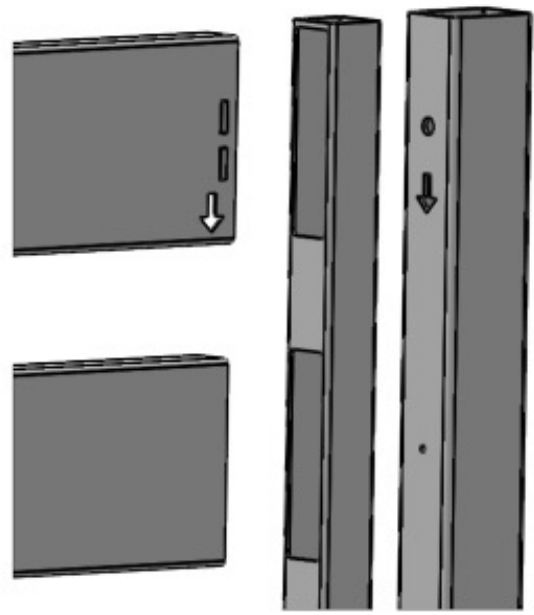


[B]

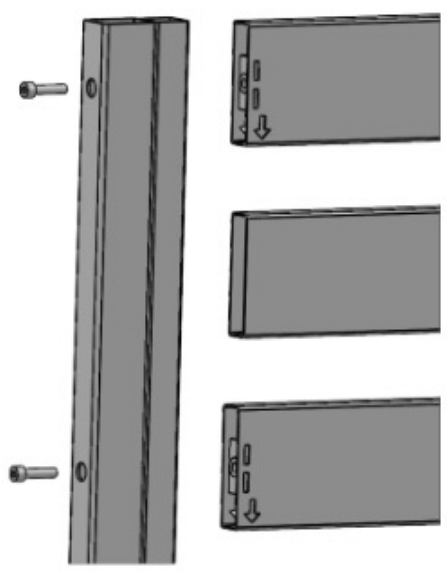

[3]


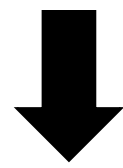
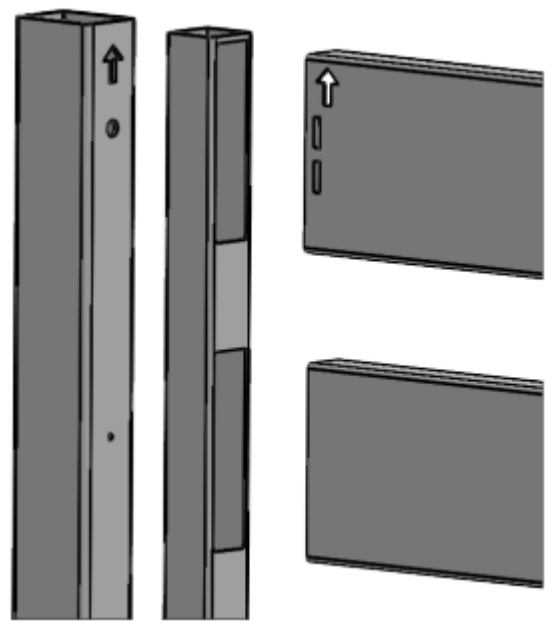


[B]

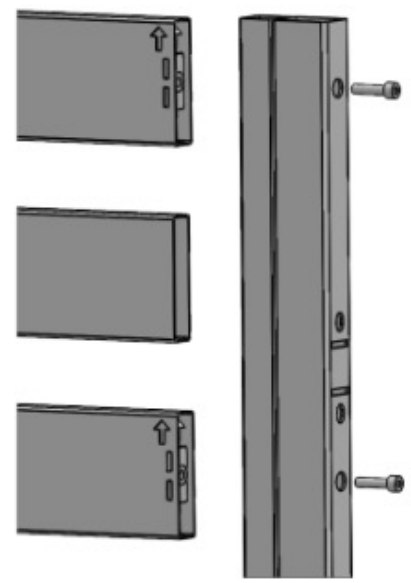


[4]

[A]

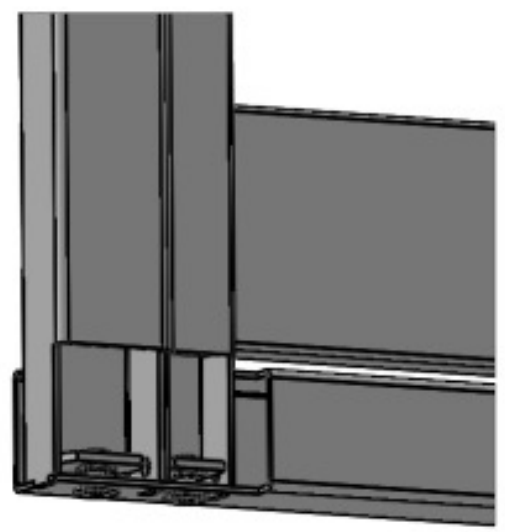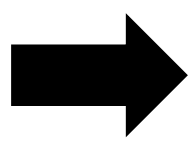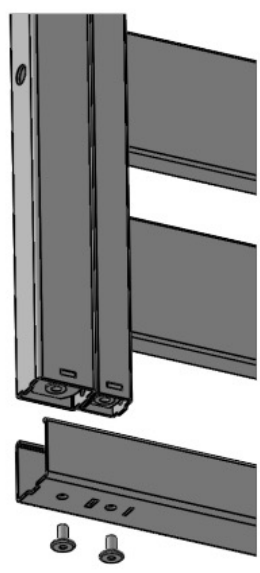

[5]

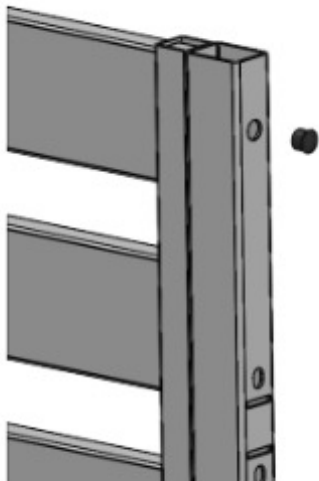

[E]

[6]



[D]

